



ANTI TIP CABLE STRAPS

FOR SECURING HEAVY FURNITURE AND TELEVISIONS TO KEEP FROM TIPPING AND FALLING.

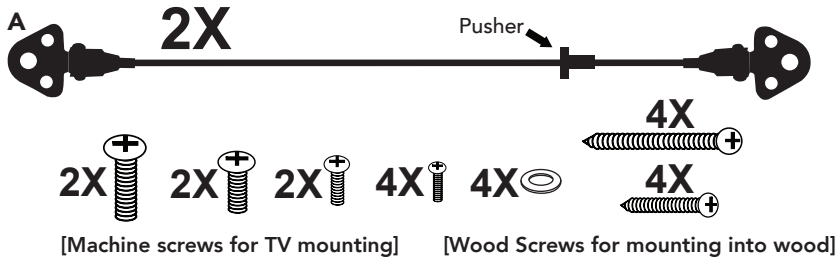

YOU WILL NEED:

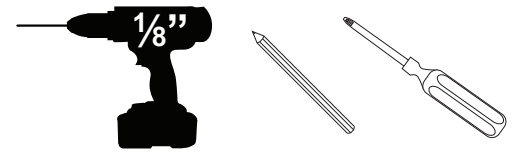

TELEVISION ASSEMBLY INSTRUCTIONS

Never place TVs on an unstable stand. Stands that are not stable should have an additional set of straps to secure the stand to the wall. When anchoring to the wall, the center of a wall stud is where the plates should be mounted. Always drill a pilot hole before using wood screws.

1 Locate UPPER television VESA holes and mount through center hole with machine screws.

2X

NOTE: VESA mount, is a family of standards defined by the Video Electronics Standards Association for mounting flat panel TVs to stands or wall mounts. NEVER DRILL HOLES INTO THE TV.

2 Fit cables from back of television to furniture or to wall. Mark needed hole location.

3 Mount bottom plates of anti-tip straps to furniture or to wall in the two outside holes using wood screws.

4X

4 Tighten and eliminate slack in cables. (SEE INSTRUCTIONS ON BACK)

2X

FURNITURE ASSEMBLY INSTRUCTIONS

When anchoring to the wall, the center of a wall stud is where the plates should be mounted. Always drill a pilot hole before using wood screws.

