


# ASSEMBL

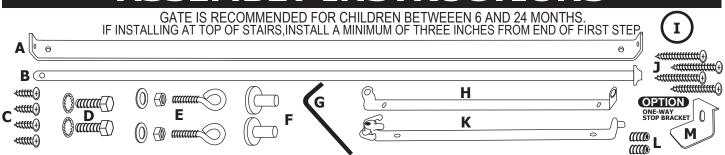

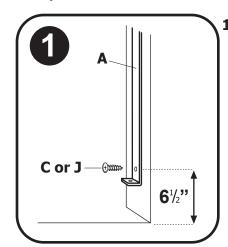


1. Install hinge bracket (A) to wall (stationary side of gate) using Phillips screw (**C**) drill pilot hole 6½" above floor surface. Must be installed into wood or a stud behind drywall.


> **OPTION:** Long screws (**J**) maybe be used to attach gate to stud through dry wall.

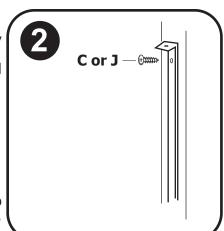


Install second screw (**C**) in top of hinge bracket securing it to the wall.

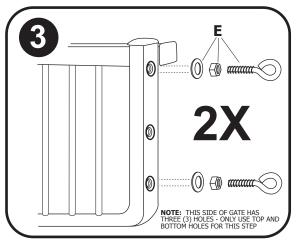


Insert eye bolts with nut and washer (**E**) into top and bottom of hinge side gate (side with three holes). Be sure nuts are tight. Do not use middle hole for this step. **Do not over**tighten eye bolts! You can break them or the rivet nut!

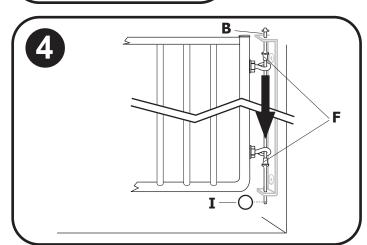

Hang gate by inserting hinge rod (**B**), through top of mounted hinge bracket (**A**), through upper plastic shoulder washer (**F**), through both eye bolts, through lower plastic shoulder washer (F), and finally through bottom of hinge bracket. To secure hinge, insert key ring (I) through hole in end of hinge rod. Gate can be mounted at angles up to 30 degrees.

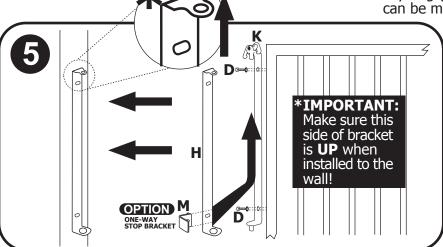

Mount latch assembly (**K**) to gate using 3/4" bolts with serrated washers (**D**). Attach wall mount for latch assembly (**H**) up into part (**K**) that is now secure on gate. Slide gate out to mark holes for (**H**) on attaching wall. (\*OPTIONAL ONE WAY 5. BRACKET INSTALLED HERE) Then attach the wall mount of latch assembly to wall using Phillips head screws (**C**). Optional long screws (J) maybe be used to attach gate to stud through dry wall.

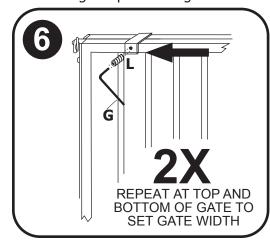

Keep gate closed and latched. Use Allen wrench (G) to insert set screws (L) in the upper and lower brackets of the gate. Tighten the set screws to set the width of the gate.

**Need help installing your SS-30?**Use your smartphone to scan the QR code on right for "How to" video.



FOR MAXIMUM SAFETY, ALWAYS KEEP GATE LATCHED AND CLOSED.



IF GATE IS INSTALLED AT TOP OF STAIRCASE: Install one-way stop bracket (M) on one side of wall mount latch to have gate open in only one direction for maximum safety.

## GATE OPERATION



Grasp gate in middle. Lift gate and align latch pins with bracket holes.

Drop in place. There is no need to close gate using flip latches.

REMEMBER: Latch to right, use left hand; latch to left, use right hand

## **GATE MAINTENANCE**

When used outdoors we suggest spraying hinge and latch parts with a marine corrosion inhibitor by CRC or equivalent. This can be obtained normally at marinas or auto parts stores. Remove set screws when separating frames for cleaning. An external hardware set is available. Please call for information.

To clean, rinse with lukewarm water, wash gently with mild soap or detergent and lukewarm water, using a soft cloth or sponge. Rinse again. Dry with a soft cloth or sponge to prevent water spotting. DO NOT SCRUB or use brushes or squeegees.

## **GATE CARE & REMINDERS**

At **CARDINAL GATES, INC.**, we design what we believe to be the very best, and most user friendly gates available. Our gates are built to last many years with proper use and care. Here are a few suggestions...

- Close gates gently do not slam to prevent damage to latch mechanism.
- When closing, be sure safety bracket on gate frame engages as depicted in instructions.
- Children should not be allowed to swing on an open gate as this can damage hinge mount.
- Keep allen wrench in a secure place. We suggest removing set screws when separating sections for cleaning. Periodically check all screws, bolts, etc. for security and proper adjustment.

**CARDINAL GATES, INC.**, offers many accessories such as extensions, stair kits, and other safety products. Check with your dealer or call CARDINAL GATES, INC. at 1-800-318-3380.

We sincerely hope that you thoroughly enjoy many years of service from your **CARDINAL GATE**.

#### GATE WARRANTY

Your Cardinal Gate is warranted to be free of manufacturing defects for a period of one year from the date of purchase when used in homes, and according to manufacturers instructions. When used commercially, such as day care centers, the warranty is 90 days.

Cardinal Gates, Inc. will either repair or replace, at our option, any parts necessary to correct defects in material or workmanship during the warranty period. The warranty disclaims liabilty for incidental, special and consequential damages of any nature.

#### **TO EXERCISE WARRANTY:**

Ship your gate in a protective carton, freight prepaid to: CARDINAL GATES, INC. 79 Amlajack Way Newnan, GA 30265

You must include the following:

- 1. Proof of purchase (store receipt, etc.).
- Brief note describing problem with gate.
   Full return address along with phone number.

s along with phone number.

ALWAYS
DISCONTINUE
USE IF GATE
BECOMES
DAMAGED,
BROKEN OR
DISASSEMBLED.

#### FOR FURTHER ASSISTANCE

CARDINAL GATES

If it's a Cardinal, It's the Best!

79 Amlajack Way Newnan, GA 30265 770-252-4200 www.cardinalgates.com



Children have died or been seriously injured when gates are not securely installed.

- ALWAYS install and use gates as directed using all required parts.
- STOP using when a child can climb over or dislodge the gate.
- Use only with the latching mechanism securely engaged.
- NEVER use to keep child away from pool.