

# POLE PADDING

## INSTALLATION INSTRUCTIONS

ONE KIT MAXIMUM POLE CIRCUMFERENCE IS 16" OR A DIAMETER OF 5"

### 1 MEASURE POLE CIRCUMFERENCE

(Distance around pole)


**THEN ADD 2"**



### 2 MARK PAD FOR CUTTING


*\*EXAMPLE ONLY:*

If circumference is 12" then measure and mark 14" from edge of pad in several locations and draw a straight line connecting the marks you just made.

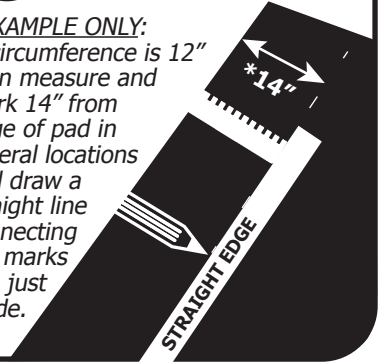


### 3 CUT PAD TO DESIRED WIDTH

Can use utility knife or scissors. Use several light cuts along a straight edge.

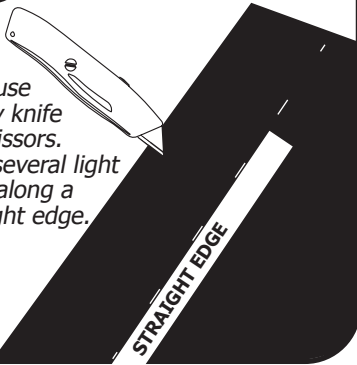


### 4 SECURE IN FOUR (4) LOCATIONS

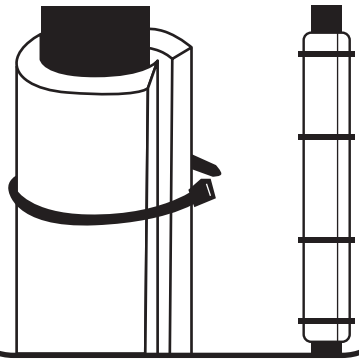

### FOR LARGER THAN FIVE INCH DIAMETER:

Use 2 kits and cut second foam pad to desired length (STEP 2).

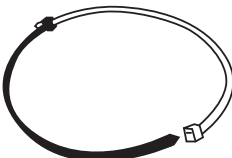

Connect two (2) zip ties to secure both pads around pole.

**Pole Padding good for indoor and outdoor use.**

**CARDINAL GATES**

770-252-4200

[www.cardinalgates.com](http://www.cardinalgates.com)